



Microwave Oven

INSTRUCTION MANUAL

Model:WD905

Read these instructions carefully before using your microwave oven, and keep it carefully.

If you follow the instructions, your oven will provide you with many years of good service.

SAVE THESE INSTRUCTIONS CAREFULLY

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.
- (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) WARNING: If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

ADDENDUM

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the apparatus and lead to a dangerous situation.

Specifications

Model:	WD905SS
Rated Voltage:	230-240V~ 50Hz
Rated Input Power(Microwave):	1450 W
Rated Output Power(Microwave):	900 W
Rated Input Power(Grill):	1100 W
Oven Capacity:	28 L
Turntable Diameter:	Ø 315 mm
External Dimensions:	595mmX395mmX385mm
Net Weight:	Approx. 16.58 kg

IMPORTANT SAFETY INSTRUCTIONS

WARNING

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:

1. Warning: Liquids and other foods must not be heated in sealed containers since they are liable to explode.
2. Warning: It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
3. This appliance can not be used by children and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children.
4. Keep the appliance and its cord out of reach of children.
5. Only use utensils suitable for use in microwave ovens.
6. The oven should be cleaned regularly and any food deposits should be removed.
7. Read and follow the specific: "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY".
8. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
9. If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
10. Do not overcook food.
11. Do not use the oven cavity for storage purposes. Do not store items, such as bread, cookies, etc. inside the oven.
12. Remove wire twist-ties and metal handles from paper or plastic containers/bags before placing them in the oven.
13. Install or locate this oven only in accordance with the installation instructions provided.
14. Eggs in the shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
15. This appliance is intended to be used in domestic household.
16. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
17. Do not store or use this appliance outdoors.
18. Do not use this oven near water, in a wet basement or near a swimming pool.
19. The temperature of accessible surfaces may be high when the appliance is operating. The surfaces are liable to get hot during use. Keep cord away from heated surface, and do not cover any vents on the oven.
20. Do not let cord hang over edge of table or counter.
21. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
22. The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.

23. Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
24. The appliance is not intended for use by persons (including children) with reduced physical , sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
25. Children should be supervised to ensure that they do not play with the appliance.
26. The appliances are not intended to be operated by means of an external timer or separate remote-control system.
27. Accessible parts may become hot during use. Young children should be kept away.
28. Steam cleaner is not to be used.
- 29 During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.
30. Only use the temperature probe recommended for this oven.(for ovens provided with a facility to use a temperature-sensing probe.)
31. WARNING: The appliance and its accessible parts become hot during use.Care should be taken to avoid touching heating elements. Children shall be kept away unless continuously supervised.
32. The microwave oven must be operated with the decorative door open.(for ovens with a decorative door.)
33. Surface of a storage cabinet can get hot.

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

To Reduce the Risk of Injury to Persons Grounding Installation

DANGER

Electric Shock Hazard

Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

2)The extension cord must be a grounding-type 3-wire cord.

3)The long cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

WARNING

Electric Shock Hazard

Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. If a long cord set or extension cord is used:
 - 1)The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.

CLEANING

Be sure to unplug the appliance from the power supply.

1. Clean the cavity of the oven after using with a slightly damp cloth.
2. Clean the accessories in the usual way in soapy water.
3. The door frame and seal and neighbouring parts must be cleaned carefully with a damp cloth when they are dirty.
4. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
5. Cleaning Tip--For easier cleaning of the cavity walls that the food cooked can touch:
Place half a lemon in a bowl, add 300ml (1/2 pint) water and heat on 100% microwave power for 10 minutes.
Wipe the oven clean using a soft, dry cloth.

UTENSILS

CAUTION

Personal Injury Hazard

It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

See the instructions on "Materials you can use in microwave oven or to be avoided in microwave oven."

There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 minute.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 minute cooking time.

Materials you can use in microwave oven

Utensils	Remarks
Aluminum foil	Shielding only. Small smooth pieces can be used to cover thin parts of meat or poultry to prevent overcooking. Arcing can occur if foil is too close to oven walls. The foil should be at least 1 inch (2.5cm) away from oven walls.
Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.
Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
Thermometers	Microwave-safe only (meat and candy thermometers).
Wax paper	Use as a cover to prevent splattering and retain moisture.

Materials to be avoided in microwave oven

Utensils	Remarks
Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.
Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.
Metal or metal-trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.
Metal twist ties	May cause arcing and could cause a fire in the oven.
Paper bags	May cause a fire in the oven.
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Wood	Wood will dry out when used in the microwave oven and may split or crack.


SETTING UP YOUR OVEN

Names of Oven Parts and Accessories

Remove the oven and all materials from the carton and oven cavity.

Your oven comes with the following accessories:

Glass tray	1
Turntable ring assembly	1
Instruction Manual	1

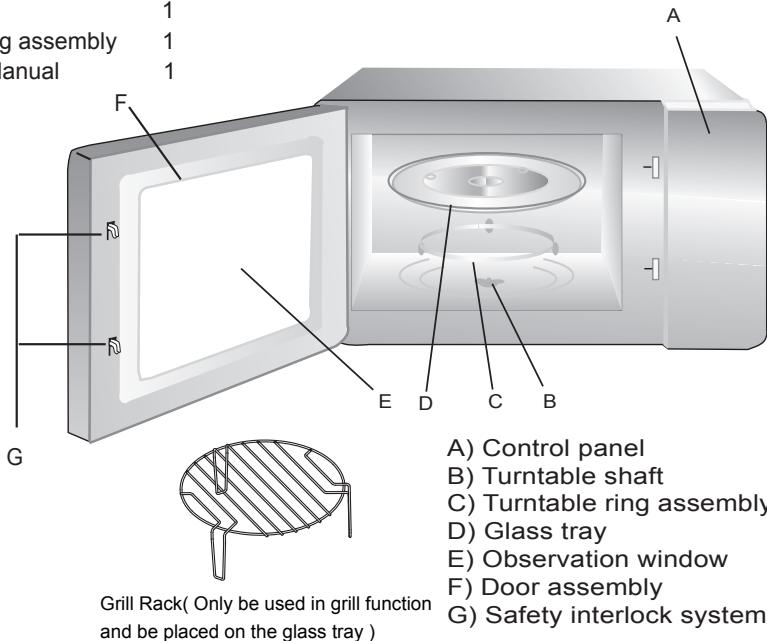

Turntable Installation



- a. Never place the glass tray upside down. The glass tray should never be restricted.
- b. Both glass tray and turntable ring assembly must always be used during cooking.
- c. All food and containers of food are always placed on the glass tray for cooking.
- d. If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.

Installation and connection


1. This appliance is only intended for domestic use.
2. This oven is intended for built-in use only. It is not intended for counter-top use or for use inside a cupboard.
3. Please observe the special installation instructions.
4. The appliance can be installed in a 60cm wide wall-mounted cupboard(at lease 55cm deep and 85cm off the floor).
5. The appliance is fitted with a plug and must only be connected to a properly installed earthed socket.
6. The mains voltage must correspond to the voltage specified on the rating plate.
7. The socket must be installed and connecting cable must only be replaced by a qualified electrician. If the plug is no longer accessible following installation, an all-pole disconnecting device must be present on the installation side with a contact gap of at least 3mm.
8. Adapters, multi-way strips and extension leads must not be used. Overloading can result in a risk of fire.

The accessible surface
may be hot during
operation.



Installation Instructions

Please Read the Manual Carefully Before Installation

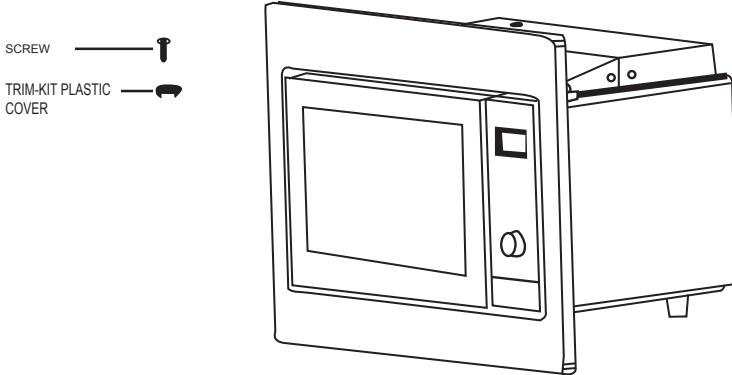

Please Note

Electrical connection

The oven is fitted with a plug and must be only connected to a properly installed earthed socket. In accordance with the appropriate regulations, the socket must only be installed and the connecting cable must only be replaced by a qualified electrician.



If the plug is no longer accessible following installation and all-pole isolating switch must be present on the installation side with a contact gap of at least 3mm.

A. Built-in furniture


The built-in cabinet shall not have a rear wall behind the appliance.

Minimum installation height is 85cm.


Do not cover ventilation slots and air intake points.

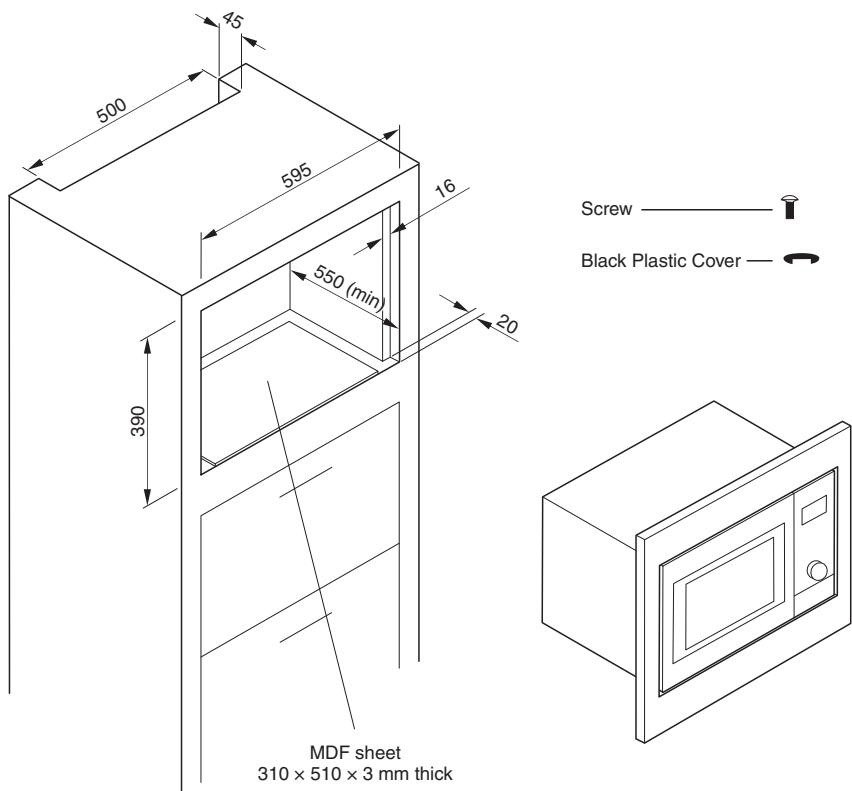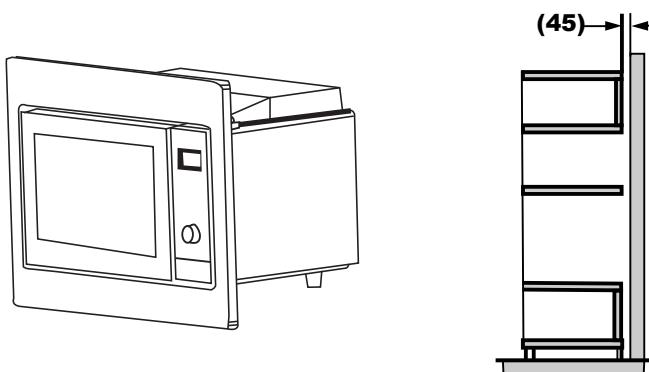

B. Install the Oven

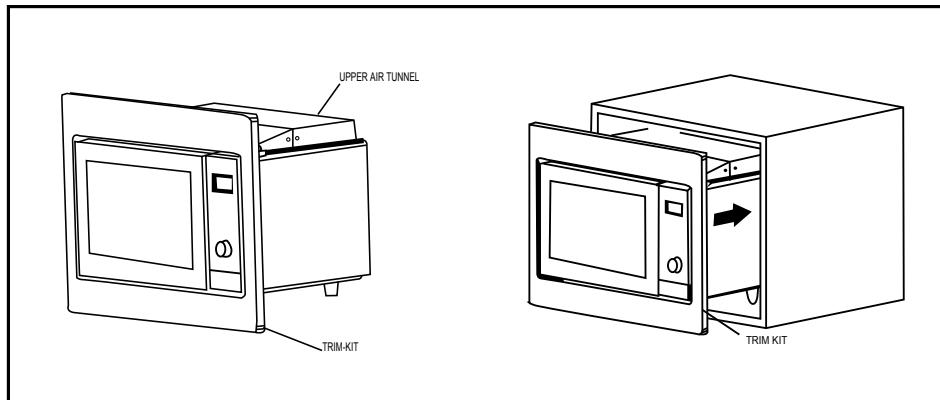

- 1.● Do not trap or kink the power cord.
● Make sure that the oven is installed in the center of the cabinet.

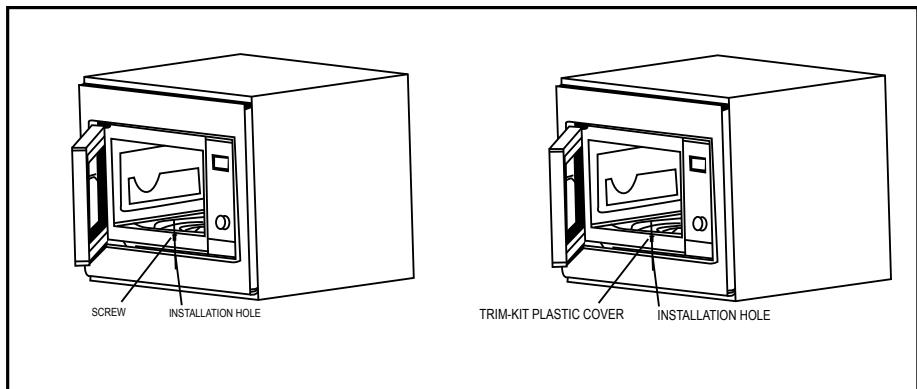

2. Open the door; fix the oven to the cabinet with SCREW at the INSTALLATION HOLE of TRIM KIT. Then fix the TRIM-KIT PLASTIC COVER to the INSTALLATION HOLE.

Operation Instructions

When the microwave oven is switched on, the LED will display "0:00".



The input time should be within 0:00--23:59;

Example: To set 12:12 .



(1) Press the " Clock/Pre-set " button, the hour figures will flash, and the indicator for clock "  " will light.



(2) Press the number buttons of "1","2","1","2" in order.



(3) Press " Clock/Pre-set " to finish clock setting. The indicator for clock "  " will go out, ":" will flash, and the time will light.



Note: In the process of clock setting, if " Stop/Clear " is pressed or if there is no operation within 1 minute, the oven will go back to the previous status automatically.

2. Delay Start

Example: to start cooking at 12:12.

(1) Set the clock first. (Consult the instruction of clock setting.)



(2) Set the cooking program wanted (defrost should not be set here).

Please do not press "START/ EXPRESS COOK" to start cooking at the last step.

(3) Press "Clock/Pre-set " to display the current clock.



(4) Press "1", "2", "1", "2" in order.

(5) Press " START/ EXPRESS COOK" to confirm the setting.

(6) Cooks begin when the time arrives, and buzzer will sound twice.

Note: (1) If the setting is not within the range 0:00--23:59, the setting will be invalid;

(2) In the process of setting, if " Stop/Clear " is pressed or there is no operation within 1 minute, the unit will go back to the previous state automatically;

(3) The clock must be set before the delay start cooking. If the pre-set cooking has not been programmed and only time to start cooking is set, the whole set will be regarded as an alarm clock setting and 5 beeps will be sound when the pre-set time is reached.

3. Microwave Cooking

Select different microwave power level and set cooking time as you wish. There are five power levels available for choosing. Refer to Chart 1. The maximum microwave cooking time is 99 minutes and 99 seconds. Keep on pressing " Microwave " to choose the power wished.

Microwave Power Chart

Press "Microwave"	Microwave Power	Display
Once	100%	
Twice	80%	
Thrice	50%	
4 times	30%	
5 times	10%	

Example: Choose 50% power for cooking 10 minutes.

- (1) Press "Microwave" thrice, "Microwave" and "Cook" will light.
- (2) Press the numeral buttons of "1", "0", "0", "0" in order;
- (3) Press "Start/Express Cook" to start cooking, the time will count down.
":", "Microwave" and "Cook" will flash.



4. Speedy Cooking

In waiting state, press "START/EXPRESS COOK" to start cooking with 100% microwave power for 30 seconds. If the remaining cooking time is no more than one minute and 30 seconds, 30 seconds will be added by each pressing "START/EXPRESS COOK" button. If the remaining cooking time is more than one minute and 30 seconds, one minute will be added by each pressing "START/EXPRESS COOK". The maximum cooking time is 12 minutes.

Example: Set 3 minutes speedy cooking:

- (1) Press "Start/Express Cook" once to start cooking, LED will display "0:30", "Microwave" and "Cook" will light.
- (2) Press "Start/Express Cook" again for 4 times, the cooking time will be 3 minutes.



5. Defrost by Weight

Example: Defrost beef of 500g:

- (1) Press "Defrost By W.T.", LED will display "dEF1", "Microwave" and "Cook" will light.
- (2) Press "5", "0", "0" in order, "g" will light, the range of defrosting weight is 100g-2000g.
- (3) Press "Start/Express Cook" to start defrosting, "g" will go out, "Microwave" and "Cook" will flash.



6. Speedy Defrost

Example: Defrost beef of 500g:

- (1) Press "Speed Defrost", LED will display "dEF2", "Microwave" and "Cook" will light.
- (2) Press "5" "0" "0" in order, "g" will light, the range of defrosting weight is 100g-1200g.
- (3) Press "Start/Express Cook" to start defrosting, "g" will go out, "Microwave" and "Cook" will flash.



7. Auto Menu Cooking

The numeral pads 1—9 are matching with nine different subjects respectively;

Pad	Display	Cook	Pad	Display	Cook	Pad	Display	Cook
1		Reheat	4		Meat	7		Pizza
2		Vegetable	5		Pasta	8		Soup
3		Fish	6		Potato	9		Porridge

Refer to chart 2 for the automatic menu procedure:

Chart 2:

Menu	Weight(g)	Press Times	Display
A-1 Reheat	150	Once	0:3.5.0
	250	Twice	0:2.5.0
	350	Thrice	0:3.5.0
	400	4 times	0:4.0.0
A-2 Vegetable	150	Once	0:3.5.0
	350	Twice	0:3.5.0
	500	Thrice	0:5.0.0
A-3 Fish	150	Once	0:3.5.0
	250	Twice	0:2.5.0
	350	Thrice	0:3.5.0
	400	4 times	0:4.0.0
	450	5 times	0:4.5.0
A-4 Meat	150	Once	0:3.5.0
	300	Twice	0:3.0.0
	450	Thrice	0:4.5.0
	600	4 times	0:6.0.0
A-5 Pasta	50(with water 450g)	Once	0:0.5.0
	100(with water 800g)	Twice	0:1.0.0
	150(with water 1200g)	Thrice	0:1.5.0
A-6 Potato	1 (about 200g)	Once	0:3.0.0
	2 (about 400g)	Twice	0:2.0.0
	3 (about 600g)	Thrice	0:3.0.0
A-7 Pizza	1 (about 80g)	Once	0:3.0.0
	2 (about 160g)	Twice	0:2.0.0
	3 (about 250g)	Thrice	0:3.0.0
A-8 Soup	500	Once	0:5.0.0
	750	Twice	0:3.5.0
	1000	Thrice	0:6.0.0
A-9 Porridge	550	Once	0:5.5.0
	1100	Twice	0:7.0.0

Example: Cook vegetable of 350g:

- (1) Press " Vegetable " button, " " and " " will light.
- (2) Press " Vegetable " button twice to choose weight, LED will display "350", "g", " " and " " will light.
- (3) Press " Start/Express Cook " to start cooking, "g" will go out, time counts down, " " and " " will flash.



8 . Grilling Cooking

- (1) Press the "GRILL/COMBI." button once to choose the grill function, the LED will display "G-1" and "  " will light.
- (2) Set the cooking time, the maximum cooking time is 99 minutes and 99 seconds.
Example: Set 12 minutes 50 seconds, press "1", "2", "5", "0" in order.
- (3) Press " Start/Express Cook " to start cooking. The cooking time counts down, ":" and "  " will flash.



Note:If half the grill time passes, the oven pauses and sounds twice, and this is normal. You can just press"Start/Express Cook "to continue cooking. But in order to have a better effect of grilling food, you should turn the food over, close the door, and then press"Start/Express Cook " to continue cooking. If there is no operation in 1 minute, the oven will continue working and beep once.

9. Combination cooking (microwave + grilling)

- (1) Press the "GRILL/COMBI." button twice or thrice to choose "Combination 1" (55%microwave+45%grill) or "Combination 2" (36%microwave+64%grill), LED will display "C-1" or "C-2", "  " and "  " will light.
- (2) Set the cooking time, the maximum cooking time is 99 minutes and 99 seconds.
Example: Set 12 minutes 50 seconds, press "1", "2", "5", "0" in order.
- (3) Press " Start/Express Cook " to start cooking. The cooking time counts down, ":" , "  " and "  " will flash.



10. Inquiring Function

- (1) In cooking state, press " Microwave " or "GRILL/COMBI.", the current power will be displayed for 3 seconds.Then the oven will turn back to the former state;
- (2) In pre-set state, press " Clock/Pre-set " to inquire the time for delay start cooking. The pre-set time will flash for 2-3 seconds, then the oven will turn back to the clock display.
- (3) In cooking state, press " Clock/Pre-set ", the current time will be displayed for 2-3 seconds. Then the oven will turn back to the former state.

11. Multi-section cooking

At most 2 sections can be set for cooking. In multi-section cooking, if one section is defrosting, then defrosting shall be placed in the first section.

Note: Auto cooking can not work in the multi-section cooking.

Example: If you want to cook the food with 100% microwave power for 10 minutes+ 80% microwave power for 15 minutes. Do it as following:

- 1) Press "Microwave" once to choose 100% microwave power;
- 2) Press number keys "1","0","0","0" in order to adjust the cooking time;
- 3) Press "Microwave" twice to choose 80% microwave power;
- 4) Press number keys "1","5","0","0" in order to adjust the cooking time;
- 5) Press "Start/Express Cook " to start cooking.

12. Lock-out Function for Children

Lock: In waiting state, press " Stop/Clear " for 3 seconds, there will be a long beep denoting entering into the children-lock state and LED will display "  ".

Lock quitting: In locked state, press " Stop/Clear " for 3 seconds, there will be a long "beep" denoting that the lock is released.

13. Cooking End Reminding Function

When cooking ends, there will be 5 beeps which is reminding the completion of cooking.

14. Display Specification

- (1) In waiting state, LED will display clock and " : " will flash.
- (2) In function setting state, LED will display the related setting.
- (3) In the operation and suspending state, LED will display the residual cooking time.

Trouble shooting

For technical support contact Technika Service 1800 333 244 or Service@technika.com.

Normal	
Microwave oven interfering TV reception	Radio and TV reception may be interfered when microwave oven operating. It is similar to the interference of small electrical appliances, like mixer, vacuum cleaner, and electric fan. It is normal.
Dim oven light	In low power microwave cooking, oven light may become dim. It is normal.
Steam accumulating on door, hot air out of vents	In cooking, steam may come out of food. Most will get out from vents. But some may accumulate on cool place like oven door. It is normal.
Oven started accidentally with no food in.	It is forbidden to run the unit without any food inside. It is very dangerous.

Trouble	Possible Cause	Remedy
Oven can not be started.	(1) Power cord not plugged in tightly.	Unplug. Then plug again after 10 seconds.
	(2) Fuse blowing or circuit breaker works.	Replace fuse or reset circuit breaker (repaired by professional personnel of our company)
	(3) Trouble with outlet.	Test outlet with other electrical appliances.
Oven does not heat.	(4) Door not closed well.	Close door well.
Glass turntable makes noise when microwave oven operates	(5) Dirty roller rest and oven bottom.	Refer to "Maintenance of Microwave" to clean dirty parts.



According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product please do NOT dispose of this product with household waste. Please send this product to WEEE collecting points where available.

READ THE INSTRUCTION BOOKLET BEFORE INSTALLING AND USING THE APPLIANCE.

The manufacturer will not be responsible for any damage to property or to persons caused by incorrect installation or improper use of the appliance.

The manufacturer is not responsible for any inaccuracies, due to printing or transcription errors, contained in this handout. In addition, the appearance of the figures reported is also purely indicative.

The manufacturer reserves the right to make changes to its products when considered necessary and useful, without affecting the essential safety and operating characteristics.

Technika constantly seeks ways to improve the specifications and designs of their products.

Whilst every effort is made to produce up to date literature, this document should not be regarded as an infallible guide.

Actual product only should be used to derive cut out sizes.

All Technika Appliances must be installed by a qualified person/s with adherence to the relevant electrical, plumbing and AGA codes, with compliance being issued as required by state or national legislation.

Additionally all Technika Upright cookers must have chains installed correctly in adherence to the relevant AGA, and plumbing codes by the Licensed installer.

For maximum effectiveness and efficiency all rangehoods should be installed with the use of ductwork, by a licenced installer with adherence to the relevant state and national building codes and regulations.

All Technika appliances are for Domestic use only, and must be installed by a licence installer into Domestic Applications only, without exception and to the required Authorities guidelines. Any installation outside of this will VOID warranty.

Alfresco areas are not a Domestic application.



TECHNIKA PTY LTD ACN 069 686 326

77 Fillo Drive Somerton Victoria 3062

General: 1800 649 969 - Service & Spare Parts: 1800 333 244

Technika After Sales Service - P.O. Box 543 SOMERTON VIC 3062